

# Side-Stream/By-Pass Flat-Surface, Self-Cleaning pH and ORP Electrodes



Quick disconnect design saves time and money

Installs in seconds, no tools needed

Flat surface design resists coating

**CPVC and PVDF construction** 

Available with or without ATC elements

Side stream mountings are particularly useful in applications involving oily coating or moderately viscous materials. This mounting hardware allows the velocity past the electrode to be controlled in a predictable manner. In the 3/4 inch flow cell, restricted 1/4 inch flow channel, each GPM of flow provides two ft/sec past the flat electrode's sensing surface. Flow rates of three to five GPM provide adequate cleaning velocities. Exact control of flow rates is not required.

In viscous material applications the above flow rates may be difficult to achieve; however, lower rates still provide flow in shear to assure that fresh material is at the measuring surface.

#### **Specifications**

Range 0-14pH (0-12pH without Na+ error)

+/- 2000mV for ORP

**Wetted Materials** 

Body/Junction: CPVC/HDPE ("-CD" models)

PVDF/ Porous PVDF ("-KD" models)

Measuring Surface: pH glass (pH), Platinum or Gold (ORP)

**Temperature/Pressure Range** 

(all models ending in "-CD") =  $0C^* - 75C$  (0-100psig), 80C (0-85psig)

(all models ending in "-KD") =  $0C^* - 100C (0-100psig)$ 


Note: From 0 to 10C, electrodes will exhibit slower response time.

**Reference Type** 


Ag/AgCl, Sealed Double Junction




**CPVC ELECTRODES** 

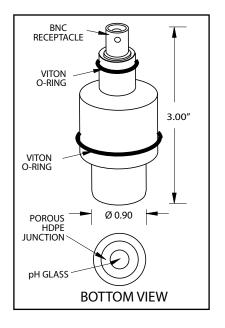


CPVC CABLE WITHOUT ATC EXPOSED CABLE MOUNTING (S648)

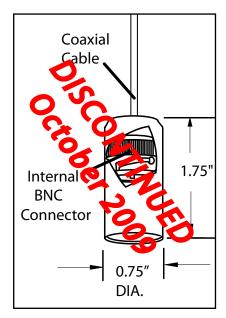

CPVC CABLE WITHOUT ATC EXPOSED
CABLE MOUNTING (S653)

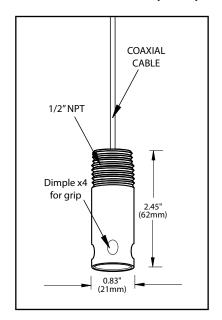


# INSTALLATION VIEW OF S645CD/ORP IN FC60C/TC TEE ASSEMBLY

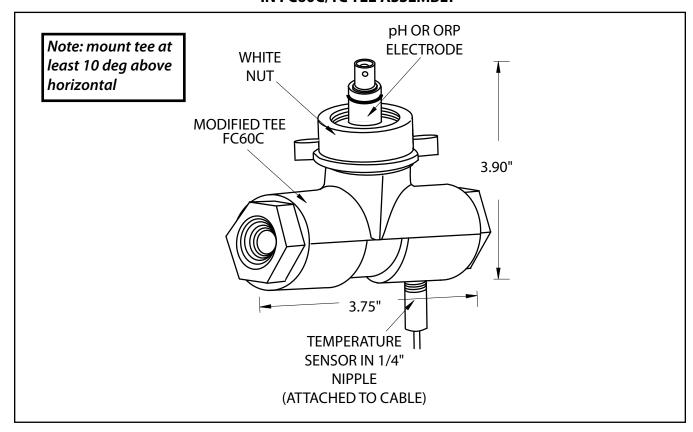





**KYNAR(PVDF) ELECTRODES** 

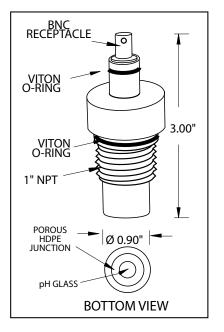


CPVC CABLE WITHOUT ATC EXPOSED CABLE MOUNTING (S648)

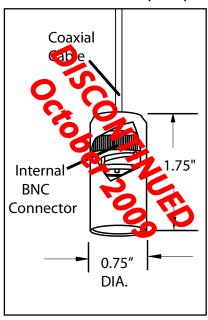

CPVC CABLE WITHOUT ATC EXPOSED CABLE MOUNTING (S653)

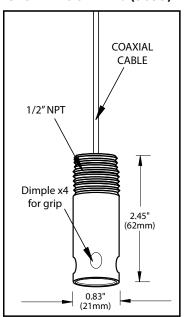

# EXPLODED INSTALLATION DRAWING FOR S645KD/ORP IN FC60C/TK TEE

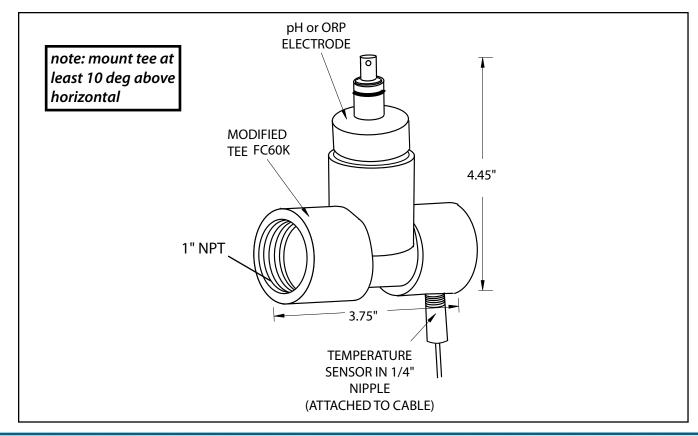



## **ORDERING INFORMATION**


#### Systems without temperature compensation

ORDER 3 ITEMS	DESCRIPTION	CPVC PARTS	KYNAR (PVDF) PARTS
1. Select one flow cell	Flow cell	FC60C	FC60K
2. Select one electrode	Combination pH electrode pH combination electrode( high temp) ORP combination electrode ORP combination electrode (high temp)	S645CD S645CD-HT S645CD-ORP S645CD-ORP-HT	S645KD S645KD-HT S645KD-ORP INQUIRE
3. Select cable assembly	For conduit use	S653-"cable length"-"connector"	S653K-"cable length"-"connector"


# Systems with temperature compensation

ORDER 2 ITEMS	DESCRIPTION	CPVC PARTS	KYNAR (PVDF) PARTS
1. Select one flow cell	Flow cell, cable assembly with ATC pH combination electrode( high temp)	FC60TC-"ATC CODE"-cable length-connectors	FC6OTK-"ATC CODE"-cable length-connectors
2. Select one electrode	Combination pH electrode pH combination electrode( high temp)	S645CD S645CD-HT	S645KD S645KD-HT


### **SELF-CLEANING OPERATION**

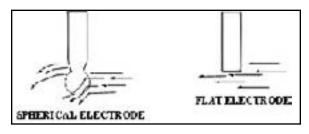

### **ABRASION-FREE OPERATION**

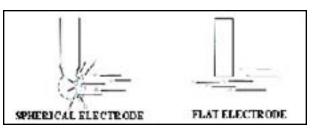

#### **VISCOUS MATERIAL OPERATION**

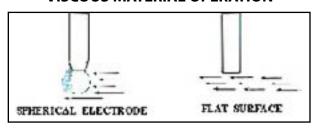



11751 Markon Dr. Garden Grove, CA 92841 USA Tel: 714-895-4344 Fax: 714-894-4839 E-mail: info@sensorex.com