# LPM100 LOOP-POWERED PROCESS METER




- 4-20 mA input
- 1 V drop (4 V with Backlight)
- 31/2 Digits LCD, 1" High
- Loop-Powered Backlight Option
- HART® Protocol Transparent
- Plastic NEMA 4X, IP65 Enclosure
- Flanges for Wall or Pipe Mounting
- Easy Calibration and Installation
- Operates from -40 to 75°C



11751 Markon Drive Garden Grove, CA. 92841 USA tel: 714-895-4344 www.sensorex.com

#### Disclaimer

The information contained in this document is subject to change without notice. Sensorex Corporation makes no representations or warranties with respect to the contents hereof; and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose.





#### WARNINGS

- This product is not recommended for life support applications or applications where malfunctioning could result in personal injury or property loss. Anyone using this product for such applications does so at his/her own risk. Precision Digital Corporation shall not be held liable for damages resulting from such improper use.
- Failure to follow installation guidelines could result in death or serious injury. Make sure only qualified personnel perform the installation.

#### Limited Warranty

Sensorex Corporation warrants this product against defects in material or workmanship for the specified period under "Specifications" from the date of shipment from the factory. Precision Digital's liability under this limited warranty shall not exceed the purchase value, repair, or replacement of the defective unit.

#### **Registered Trademarks**

All trademarks mentioned in this document are the property of their respective owners.

© 2016 Sensorex Corporation. All rights reserved.

# INTRODUCTION

The LPM100 is a rugged, loop-powered meter with 1" display digits. The plastic NEMA 4X and IP65 field mountable enclosure is designed for demanding applications in the harshest environmental conditions. The meter derives all of its power from the 4-20 mA loop with a small 1 volt drop for easy installation in almost any system.

It is programmed using four easy to access front-mounted control dials with no complex or difficult to read programming menus necessary for setup. The numeric display will read from -1999 to 1999 over a 2000 count user adjustable scaling span. The backlight option lets you see the display under any lighting condition and is powered from the 4-20 mA loop with no additional power supply required.

The enclosure is provided with two threaded conduit holes and integrated pipe or wall mounting slotted flanges.

# **ORDERING INFORMATION**

Model	Description	
LPM100	Loop-Powered Process Meter with Backlight	

#### Accessories

Model	Description
LPMA002	Pipe Mounting Kit. Includes stainless steel u- bolt for 2" pipe, (2) washers, and (2) nuts.

Table of Contents	
INTRODUCTION	3
ORDERING INFORMATION	3
SPECIFICATIONS	5
General	5
Input	6
SAFETY INFORMATION	7
INSTALLATION	8
Unpacking	8
Conduit/Stopping Plug	
Mounting	8
Connections	9
Connections & Wiring Diagrams	
SETUP	
Scaling Controls and Display	
Setting Up the Meter	12
Calibrating the Meter	
Setting the Decimal Point	
Factory Defaults & User Settings	
TROUBLESHOOTING	
Troubleshooting Tips	
MOUNTING DIMENSIONS	15

### **Table of Figures**

Figure 1. LPM100 Connectors	9
Figure 2. LPM100 Input Connections with Loop-Powered Backlight	
Figure 3. Enclosure Dimensions – Front View	15
Figure 4. Enclosure Dimensions – Side Cross Section View	15

# SPECIFICATIONS

Except where noted all specifications apply to operation at +25°C.

### General

DISPLAY	3 ½ digit LCD 1" (25.4 mm); -1999 to 1999	
DISPLAY UPDATE RATE	2.5 Updates/Second	
OVERRANGE	Display reads 🧜 on the left most digit	
PROGRAMMING METHOD	Four front mounted rotary control dials accessed when the cover is removed.	
RECALIBRATION	Recalibration is recommended at least every 12 months.	
NORMAL MODE REJECTION	60 dB rejection ratio	
ENVIRONMENTAL	Operating temperature range: -40 to 75°C Storage temperature range: -40 to 75°C Relative humidity: 0 to 90% non-condensing	
CONVECTIONS		
CONNECTIONS	Screw terminals accept 12 to 22 AWG wire	
ENCLOSURE	NEMA 4X, IP65 plastic field enclosure.	
	NEMA 4X, IP65 plastic field enclosure.	
	NEMA 4X, IP65 plastic field enclosure. Color: grey. Three ¾" NPT threaded conduit openings. One ¾" NPT plastic conduit plug, with 1.29" wrenching flats and a	
ENCLOSURE	<ul> <li>NEMA 4X, IP65 plastic field enclosure.</li> <li>Color: grey.</li> <li>Three ¾" NPT threaded conduit openings. One ¾" NPT plastic conduit plug, with 1.29" wrenching flats and a screwdriver slot, is included.</li> <li>May be mounted directly to conduit. Two slotted flanges for wall mounting or NPS 1½" to 2½" or DN 40 to 65 mm pipe</li> </ul>	
ENCLOSURE MOUNTING OVERALL	<ul> <li>NEMA 4X, IP65 plastic field enclosure.</li> <li>Color: grey.</li> <li>Three ¾" NPT threaded conduit openings. One ¾" NPT plastic conduit plug, with 1.29" wrenching flats and a screwdriver slot, is included.</li> <li>May be mounted directly to conduit. Two slotted flanges for wall mounting or NPS 1½" to 2½" or DN 40 to 65 mm pipe mounting. See Mounting Dimensions on page 15.</li> <li>5.67" x 5.25" x 4.18" (W x H x D)</li> </ul>	
ENCLOSURE MOUNTING OVERALL DIMENSIONS	<ul> <li>NEMA 4X, IP65 plastic field enclosure.</li> <li>Color: grey.</li> <li>Three ¾" NPT threaded conduit openings. One ¾" NPT plastic conduit plug, with 1.29" wrenching flats and a screwdriver slot, is included.</li> <li>May be mounted directly to conduit. Two slotted flanges for wall mounting or NPS 1½" to 2½" or DN 40 to 65 mm pipe mounting. See Mounting Dimensions on page 15.</li> <li>5.67" x 5.25" x 4.18" (W x H x D) (144 mm x 133 mm x 106 mm)</li> </ul>	

Input			
ACCURACY	±0.1% of full span ±1 count		
TEMPERATURE DRIFT	150 PPM/°C from -40 to 75°C ambient		
DECIMAL POINT	User selectable decimal point		
CALIBRATION RANGE	4 mA input: -1000 to +1000; 20 mA between 20 and 2000 counts greater than 4 mA display. Two point linear display span.		
MAXIMUM VOLTAGE DROP	With Loop-Powered Backlight		
	4 VDC @ 20 mA		
EQUIVALENT RESISTANCE	200 Ω @ 20 mA		
INPUT OVERLOAD	Over current protection to 2 A max.		

### SAFETY INFORMATION



- Read complete instructions prior to installation and operation of the meter.
- Installation and service should be performed only by trained service personnel. Service requiring replacement of internal components must be performed at the factory.
- Disconnect from supply before opening enclosure. Keep cover tight while circuits are alive.
- If the meter is installed in a high voltage environment and a fault or installation error occurs, high voltage may be present on any lead

# INSTALLATION

All controls and wiring connectors are accessed by opening the enclosure. To access electrical connectors, remove the 2 captive screws and remove the display module from the enclosure.



Hazardous voltages may exist within enclosure. Installation and service should be performed only by trained service personnel.

# Unpacking

Remove the meter and conduit plug from box. Inspect the packaging and contents for damage. Report damages, if any, to the carrier. If any part is missing or the meter malfunctions, please contact your supplier or the factory for assistance.

# **Conduit/Stopping Plug**

The LPM100 includes three <sup>3</sup>/<sup>4</sup> NPT threaded conduit openings and 2 each IP68 rated <sup>3</sup>/<sub>4</sub>" NPT plastic conduit plugs. The conduit/stopping plugs included have 1.29" wrenching flats and a screwdriver slot.

# Mounting

The LPM100 has two slotted mounting flanges that may be used for pipe mounting or wall mounting. Alternatively, the unit may be supported by the conduit using the conduit holes provided.

Refer to Mounting Dimensions, page 15 for details.



Do not attempt to loosen or remove flange bolts while the meter is in service.

#### Connections



- Static electricity can damage sensitive components.
- Observe safe handling precautions for static-sensitive components.
- Use proper grounding procedures/codes.
- If the meter is installed in a high voltage environment and a fault or installation error occurs, high voltage may be present on any lead or terminal.

To access the connectors, remove the enclosure cover and unscrew the two captive screws that fasten the display module. Remove the display module. Signal connections are made to a three-terminal connector on the rear of the display module.

- S+ 4-20 mA signal input positive terminal connection
- S- Not used. Use B-
- **B-** 4-20 mA signal return/negative terminal when using the installed loop powered backlight option.

Refer to Figure 1 for terminal positions.



Observe all safety regulations. Electrical wiring should be performed in accordance with all agency requirements and applicable national, state, and local codes to prevent damage to the meter and ensure personnel safety.

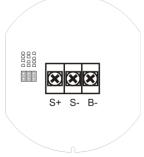


Figure 1. LPM100 Connectors

#### **Connections & Wiring Diagrams**

Signal connections are made to a three-terminal connector mounted on the rear of the display module. The enclosure also provides one internal and one external earth grounding screw. The 4-20 mA input with no backlight has a maximum voltage drop of 1 V and is wired as shown in Figure 2. The loop-powered backlight configuration requires a total maximum voltage drop of 4 V. The backlight option is recommended for dim lighting conditions and is enabled when wired as shown in Figure 3.

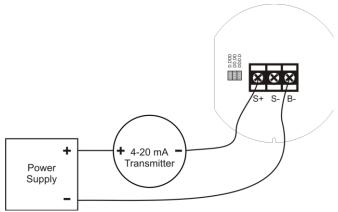


Figure 2. LPM100 Input Connections (Loop-Powered Backlight)

# SETUP

#### Overview

Setup is done using four rotary control dials located on the front of the display module that are accessed when the meter cover is removed. Setup is performed using a 4-20 mA signal source and scaling the 4 and 20 mA readings using the control dials.

### **Scaling Controls and Display**



Control	Description
LO	4 mA display adjust.
LO FINE	4 mA precision display adjust.
н	20 mA display adjust.
HI FINE	20 mA precision display adjust.

### Setting Up the Meter

#### **Calibrating the Meter**

The meter is provided factory calibrated to display -50.0 at 4 mA and 150.0 at 20 mA. HI and LO coarse and fine controls are labeled on the front of the display. Use the HI and LO controls for large range changes during calibration and the HI FINE and LO FINE controls for precision changes.

Apply a 4 mA signal and adjust the LO controls to display the desired reading. Apply a signal between 16 and 20 mA and adjust the HI controls to display the desired reading. Complete the calibration procedure by making minor adjustments to the LO and HI controls as necessary.

#### Minimum & Maximum Input Span

A minimum input span of 20 counts is required between a 4 mA and 20 mA input. A maximum input span of 2000 counts may be setup between a 4 mA and 20 mA input.

The meter will not properly calibrate or display if these minimum and maximum span ranges are not maintained during scaling.

#### Setting the Decimal Point

Decimal point may be set using a three position jumper on the rear of the display module. To access the connectors, unscrew the two captive screws that fasten the display module. Remove the display module and place the jumper on the desired pins as indicated on the board for decimal point locations of D.DDD, DD.DD, DDD.D, or remove it if no decimal point is desired.

#### **Factory Defaults & User Settings**

The following table shows the factory setting for most of the programmable parameters on the meter. Next to the factory setting, the user may record the new setting for the particular application.

Model:	S/N:	Date:
Parameter	Default Setting	User Setting
Decimal point	1 place	
Calibration Settings		
Input 1	4.00 mA	
Display 1	-50.0	
Input 2	20.00 mA	
Display 2	150.0	

# TROUBLESHOOTING


The rugged design and the user-friendly interface of the meter should make it unusual for the installer or operator to refer to this section of the manual. If the meter is not working as expected, refer to the recommendations below.

### **Troubleshooting Tips**

Symptom	Check/Action
No display	Check input signal connections.
Rate display unsteady during calibration	Adjust LO FINE or HI FINE controls to fine-tune the display.
Meter displays f on the left most digit location	Check signal level is not over range.
	Dial down the HI control and re- calibrate at 20 mA.
Display is faded	Check input signal is not under 1 mA.
If the display locks up or the meter does not respond at all	Perform hard reset by shorting S+ and S- terminals.
Backlight does not appear	Verify backlight is installed.
	Check signal connections are as shown in Figure 3 on page 10.
Other symptoms not described above	Call Technical Support for assistance.

# MOUNTING DIMENSIONS

All units: inches [mm]

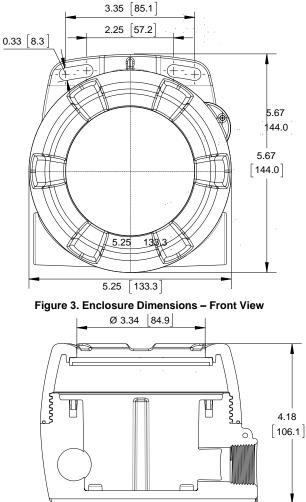

**Figure 4. Enclosure Dimensions – Side Cross Section View Note:** The supplied conduit plug may extend up to 0.21 in [5.3 mm] from the conduit opening when installed.

# How to Contact Sensorex Corporation

- For Technical Support: Call: (714) 895-4344
   Email: support@sensorex.com
- For Sales Support: Call: (714) 895-4344
   Email: sales@sensorex.com
- For the latest version of this manual please visit: www.sensorex.com/support