

S8000 pH & ORP Systems

Digital Communication for More Process Visibility:

- Modbus and 4-20 mA output options now available
- Configuration and calibration can be done using web based software

Customizable, Configurable, and Versatile

- Customizable packages reduce total cost of ownership!
- Only purchase the components you need
- Adapt the solution to your application requirements
- Available in 2 standard cable lengths: 10 and 20 feet

Reduce Maintenance and Downtime

- No tools or rewiring needed for replacing sensor cartridge
- Flat glass measurement surface reduces the threat of breakage
- Heavy duty high temperature reference gels offer protection against thermal breakdown
- PPS body allows for durability in a range of chemical environments
- ERP technology protects the reference cell and prevents contamination



pH & ORP sensor cartridges & quick change replacements



Electrode adapters with optional built-in ATC



Optional electronic modules - amplifier, transmitter



Cable assemblies - 10ft, 20ft or custom length

DESIGNED AND ASSEMBLED IN CALIFORNIA, USA

11751 MARKON DRIVE • GARDEN GROVE, CA 92841 • 714.895.4344 • WWW.SENSOREX.COM

© Sensorex Corporation. All rights reserved. In the interest of improving and updating its equipment, Sensorex reserves the right to alter specifications to equipment at any time.



Specifications

pH Range	0 - 14pH (0-12.3pH with low Na ⁺ ion error)
Temperature Range	0-100°C, de-rated under pressure 0-80°C when mounted in flow cell 70°C with submerged electronic module
Pressure Range	0-100 psig (7.5 Bar), de-rated under temperature
Reference Type	Double Junction, Sensorex ERP System

Optional Models

ORP Redox Electrode	-2000mV to +2000mV
HF Resistant pH Electrode	0-12pH, 0-50°C, <2% HF by volume
Low Ionic Models	For solutions of <100uS/cm conductivity
EM802-pH	0-14pH = 4-20mA
EM802-ORP	-1000 to +1000mV = 4-20mA

Outline and Dimensions

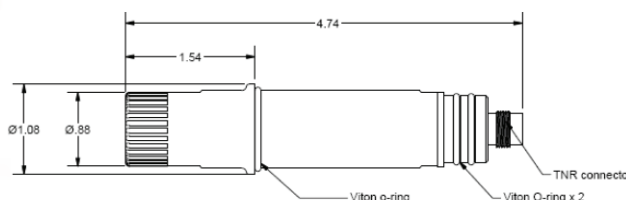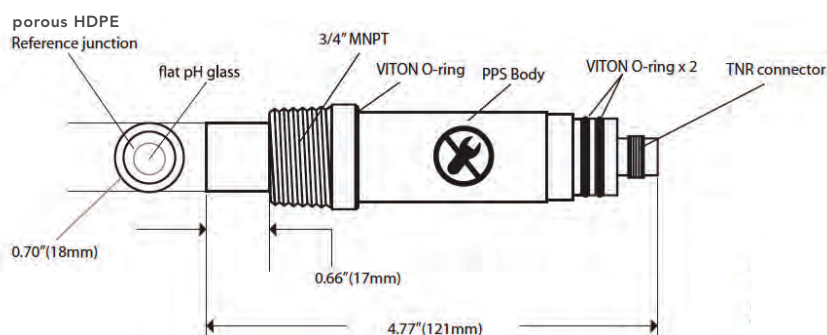

pH & ORP Electrode Ordering Information

Part #	Description
S8000CD	Flat surface pH electrode cartridge S8000 Series, Ryton body, double junction reference
S8000CD-ORP	Flat surface ORP electrode cartridge S8000 Series, Ryton body, double junction reference
S8000CDHF	Flat surface pH electrode cartridge S8000 Series, HF resistant, Ryton body, double junction reference
S8000CD-LC	Flat surface pH electrode cartridge S8000 Series, for low conductivity water (<100uS), Ryton body, double junction reference
S8075CD	Flat surface pH electrode cartridge S8000 Series, Ryton body, double junction reference, integrated 3/4" NPT threads
S8075CD-ORP	Flat surface ORP electrode cartridge S8000 Series, Ryton body, double junction reference, integrated 3/4" NPT threads
S8075CDHF	Flat surface pH electrode cartridge S8000 Series, HF resistant, Ryton body, double junction reference, integrated 3/4" NPT threads
S8075CD-LC	Flat surface pH electrode cartridge S8000 Series, for low conductivity water (<100uS), Ryton body, double junction reference, integrated 3/4" NPT threads

DESIGNED AND ASSEMBLED IN CALIFORNIA, USA

11751 MARKON DRIVE • GARDEN GROVE, CA 92841 • 714.895.4344 • WWW.SENSOREX.COM

© Sensorex Corporation. All rights reserved. In the interest of improving and updating its equipment, Sensorex reserves the right to alter specifications to equipment at any time.

Build Your S8000 Modular pH/ORP System



Cable Assembly
S853 or S855
Cap Cable



Electronic Module
EM800, EM801,
EM802, EM802-MB



Electrode Adapter


EA890

EA891

EA899 or EA899TC



Electrode
S8000CD, S8000CDHF,
S8000CD-LC, S8000CD-ORP

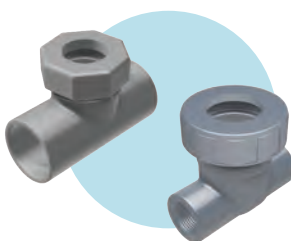

Flow Cell *(Inline Only)*
Fc800 - 1.5" Slip

FC875/T - 3/4" NPT
FC875/S - 3/4" SLIP

DESIGNED AND ASSEMBLED IN CALIFORNIA, USA

11751 MARKON DRIVE • GARDEN GROVE, CA 92841 • 714.895.4344 • WWW.SENSOREX.COM

© Sensorex Corporation. All rights reserved. In the interest of improving and updating its equipment, Sensorex reserves the right to alter specifications to equipment at any time.

Build Your S8000 Modular pH/ORP System

Use your own TEE



Cable Assembly
S853 or S855
Cap Cable




Electronic Module
EM800, EM801,
EM802, EM802-MB



Electrode Adapter
EA891



Electrode
S8000CD, S8000CDHF,
S8000CD-LC, S8000CD-ORP

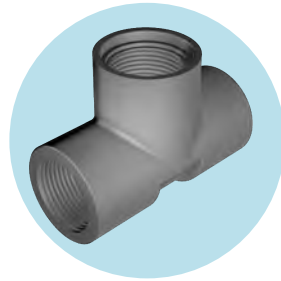

3/4" SCH 80 TEE
Customer supplied

DESIGNED AND ASSEMBLED IN CALIFORNIA, USA

11751 MARKON DRIVE • GARDEN GROVE, CA 92841 • 714.895.4344 • WWW.SENSOREX.COM

© Sensorex Corporation. All rights reserved. In the interest of improving and updating its equipment, Sensorex reserves the right to alter specifications to equipment at any time.

Electrode Adapter Ordering Information

Part #	Description
EA890	Electrode adapter, retrofits S8000 to old S653 cable.
EA891	Electrode adapter, submersion mount, no temperature compensation. Use with cable S853.
EA899	Electrode adapter, submersion or in-line mount, no temperature compensation, with solution ground. Use with cable S855.
EA899TC	Electrode adapter, submersion or in-line mount, with temperature compensation and solution ground. Use with cable S855. Specify temperature compensation. Pt1 = PT100, P1k = PT1000

Electronic Module Ordering Information

Part #	Description
EM800	Battery-powered, unity gain amplifier. Use for cable length >30ft only. Use with S853, or (S855 cable when using EA899TC).
EM801	Battery-powered, differential amplifier. Requires Electrode adapter EA899 or EA899 TC. Use with S855 cables.
EM802-pH	24V DC-powered, 4-20mA pH transmitter module. Requires Electrode adapter EA899/TC or EA891. Use with S853 cable.
EM802-ORP	24V DC-powered, 4-20mA ORP transmitter module. Requires Electrode adapter EA899 or EA891. Use with S853 cable.
EM802-pH-MB2**	24V DC-powered, Modbus pH transmitter module. Requires Electrode adapter EA899 or EA891. Use with S856 cable.
EM802-ORP-MB2**	24V DC-powered, Modbus ORP transmitter module. Requires Electrode adapter EA899 or EA891. Use with S856 cable.

S857 **Cal + Configure cable**

***12V powered versions also available. Inquire at Sensorex*

Cable Assembly Ordering Information

Part #	Description
S853/10/"X"	Coaxial cable assembly for S8000 Series., 10ft cable length. Specify connector in place of "X"
S853/20/"X"	Coaxial cable assembly for S8000 Series., 20ft cable length. Specify connector in place of "X"
S855/10/"X"/"Y"	Coaxial cable assembly + 3 wire (R, G, B) S8000 Series, 10ft cable length. Specify pH connector in place of "X", TC connector in place of "Y"
S855/20/"X"/"Y"	Coaxial cable assembly + 3 wire (R, G, B) S8000 Series, 20ft cable length. Specify pH connector in place of "X", TC connector in place of "Y"
S856/10/TL/TL	Cable assembly 10ft for use with EM802-pH-MB and EM802-ORP-MB versions
S856/20/TL/TL	Cable assembly 20ft for use with EM802-pH-MB and EM802-ORP-MB versions

10ft and 20ft cables are in stock. Other cable lengths can be made. Consult Sensorex for details. Cable Connector Choices: BNC, Tinned lead ("-TL"), Spade Lug ("SL")

Flow Cell Ordering Information

Part #	Description
FC800	Flow cell, CPVC for S8000 Series. Fits EA899 or EA899TC electrode adapters, 1.5" Slip connection.
FC805	Flow cell, CPVC for S8000 Series. Fits EA899 or EA899TC electrode adapters, 1.0" FNPT
FC95C	Flow cell, CPVC for S8000 Series. Fits EA899 or EA899TC electrode adapters, 2.0" Slip connection.
FC806	Flow cell, CPVC for S8000 Series. Fits EA899 or EA899TC electrode adapters, 1.0" Slip connection.
FC875/T	Flow cell, CPVC for S8000 Series. Fits EA899 or EA899TC electrode adapters, 3/4" MNPT connection.
FC875/S	Flow cell, CPVC for S8000 Series. Fits EA899 or EA899TC electrode adapters, 3/4" slip/socket connection.

DESIGNED AND ASSEMBLED IN CALIFORNIA, USA

11751 MARKON DRIVE • GARDEN GROVE, CA 92841 • 714.895.4344 • WWW.SENSOREX.COM


© Sensorex Corporation. All rights reserved. In the interest of improving and updating its equipment, Sensorex reserves the right to alter specifications to equipment at any time.

Pre-configured Kits Ordering Information


Part #	Description
S8100/10/BNC	Kit, S8000CD + EA891 + S853/10/BNC (Submersion mount pH, no ATC), 10ft cable, BNC connector.
S8100-ORP/10/BNC	Kit, S8000CD-ORP + EA891 + S853/10/BNC (Submersion mount ORP), 10ft cable, BNC connector
S8100TC/10/BNC/TL	Kit, S8000CD + EA899TC/P1K + S855/10/BNC/TL (Submersion mount pH with ATC, 10ft cable, BNC connector, PT1000 TC type)
S8200/10/BNC	Kit, S8000CD + EA899 + FC800 + S853/10/BNC (In line pH, no ATC, 1.5" Flow cell, 10ft cable, BNC connector)
S8200-ORP/10/BNC	Kit, S8000CD-ORP + EA899 + FC800 + S853/10/BNC (In line ORP, 1.5" Flow cell, 10ft cable, BNC connector)
S8200TC/10/BNC/TL	Kit, S8000CD + EA899TC/P1K + S855/10/BNC/TL (In line mount pH with ATC, 1.5" Flow cell, 10ft cable, BNC connector, PT1000 TC type)
S8300/10/BNC	Kit, S8000CD + EA899 + FC875/T + S853/10/BNC (In line pH, no ATC, 3/4" Flow cell, 10ft cable, BNC connector)
S8300TC/10/BNC/TL	Kit, S8000CD + EA899TC/P1K + FC875/T + S855/10/BNC/TL (In line pH, with ATC, 3/4" Flow cell, 10ft cable, BNC connector, PT 1000 TC type)

Outline and Dimensions

S8300TC/10/BNC/TL

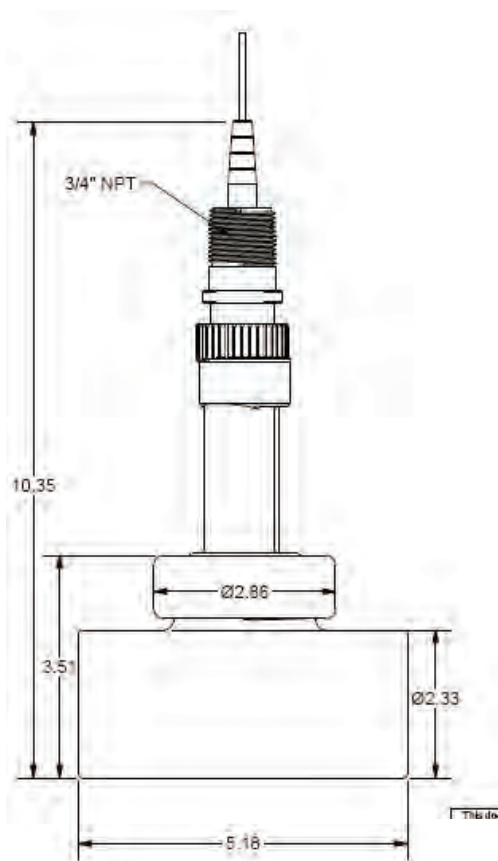



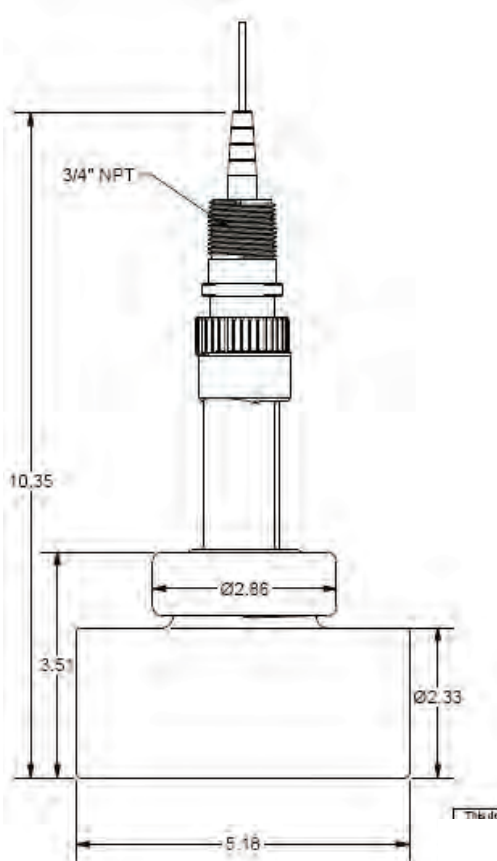






S8000CD + EA899TC
+ S855 + FC800/FC805/FC806





S8000 MODULAR SYSTEMS

MODEL # S8000CD

DESCRIPTION	CODE	X	X	X	X	X	X	X	X
MEASUREMENT TYPE PH ORP	-ORP								
HOLDER EA891 Holder (Used with pH only) EA891 Holder (Used with ORP only)	EA891 EA899TC/P1K								
CABLE S856	S856								
CABLE LENGTH 10 Foot cable 20 Foot cable	10 20								
LEADS Tinned Lead Connector	TL/TL								
FLOW CELL None Flow Cell	+FC875T								
EM802 MODULE EM802-pH pH EM802-ORP ORP	+EM802-pH +EM802-ORP								
EM802 MODULE POWER 12VDC 24VDC	- MB1 - MB2								
CALIBRATION ACCESSORY s857 Calibration Adapter	S857								

DESIGNED AND ASSEMBLED IN CALIFORNIA, USA

11751 MARKON DRIVE • GARDEN GROVE, CA 92841 • 714.895.4344 • WWW.SENSOREX.COM

© Sensorex Corporation. All rights reserved. In the interest of improving and updating its equipment, Sensorex reserves the right to alter specifications to equipment at any time.